

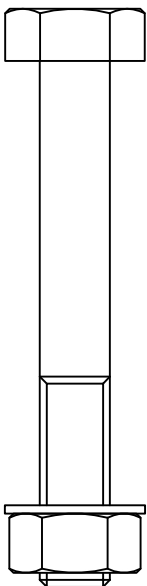


68-6773 Bolt Left-hand, Rear
Shock Absorber Top /
Mudguard Mounting 1 Øff


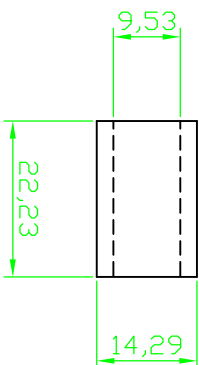


Imperial = $\frac{3}{8}$ "UNF x $2\frac{7}{8}$ "
Metric = 10mm x 75mm


68-6906 Spacer Left-hand
Rear Mudguard Mounting 2 Øff
Imperial



68-6906 Spacer Left-hand
Rear Mudguard Mounting 2 Øff
Metric

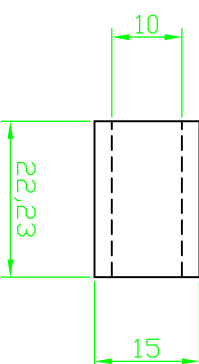



68-4243 Bolt Right-hand, Rear
Shock Absorber Top /
Mudguard Mounting 1 Øff

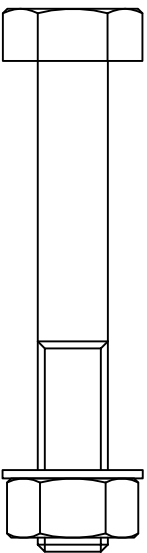

Imperial = $\frac{3}{8}$ "UNF x $2\frac{1}{4}$ "
Metric = 10mm x 70mm

40-4909 Spacer Right-hand
Rear Mudguard Mounting 1 Øff
Imperial

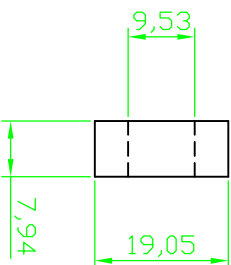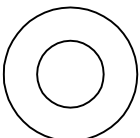

40-4909 Spacer Right-hand
Rear Mudguard Mounting 1 Øff
Metric

